



THERMOSTAT COMPONENTS

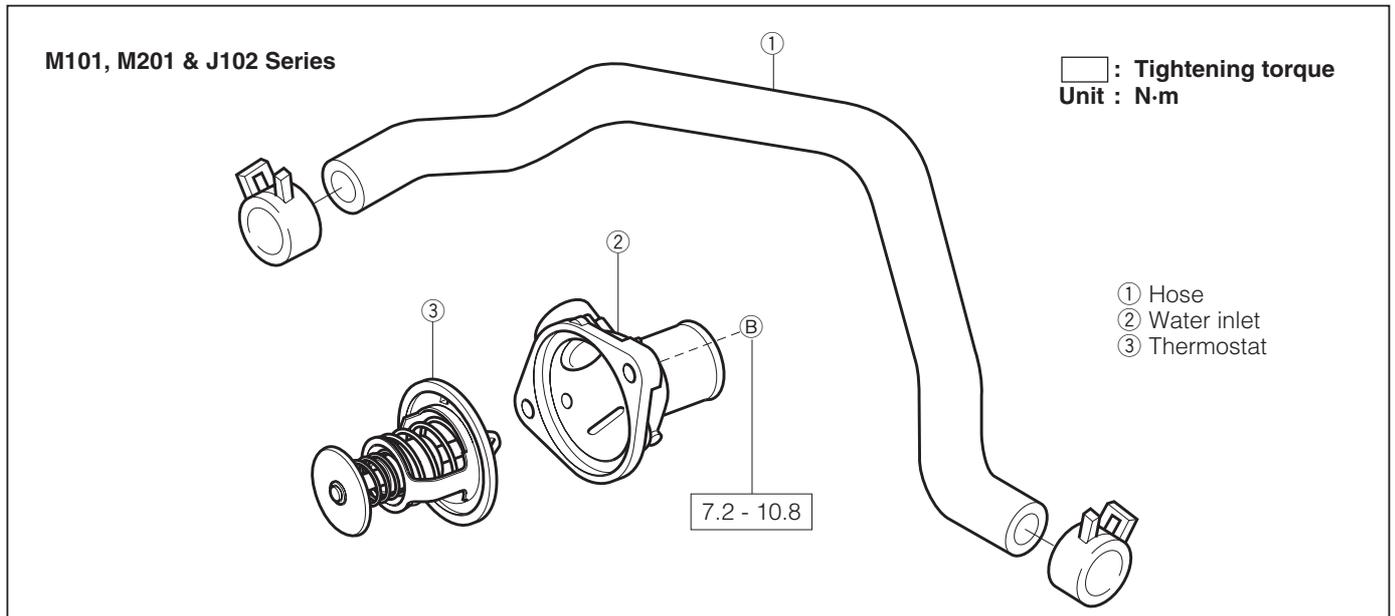

YCO00032-00024

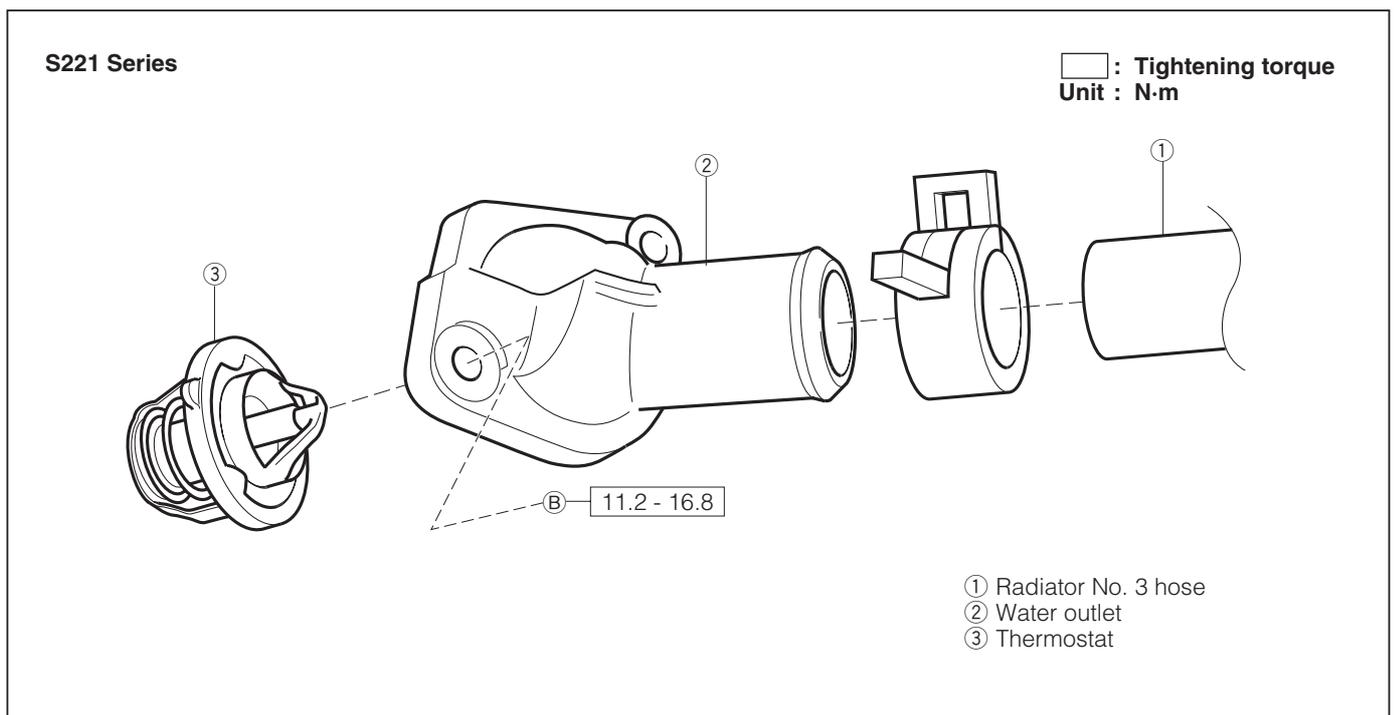

YCO00000-00025

REMOVAL

M101, M201 & J102 Series

1. Drain the engine coolant. (Refer to CO-3.)
2. Disconnect the radiator thermo control switch connector. (Only for EU spec.)
3. Remove the water inlet from the cylinder head.
4. Remove the thermostat from the cylinder head.

S221 Series

1. Drain the engine coolant (Refer to CO-3.)
2. Remove the water outlet from the cylinder head.
3. Remove the thermostat from the cylinder head.

YCO00033-00000